

Infrared thermometer Instruction manual



Version: 900-EN-00

- 1 -

A. Introduction

This infrared thermometer is used for measuring the temperature of the object's surface, which is applicable for various hot, hazardous or hard-to-reach objects without contact safely and quickly.

This unit consists of Optics, Temperature Sensor Signal amplifier, Processing circuit and LCD Display. The Optics collect the infrared energy emitted by the object and focus onto the Sensor. Then the sensor translates the energy into an electricity signal. This signal will be turned out to be digital shown on the LCD after the signal amplifier and processing circuit.

B. WARNING & CAUTIONS

1. Warning:

To avoid the potential situation that may cause harm or damage to people, please pay attention to the following items:

- 1) Do not point the laser directly at the eye or indirectly at reflective surfaces.
- 2) The unit cannot measure through transparent surfaces such as glass or plastic. It will measure the surface temperature of these materials instead.
- 3) Steam, dust, smoke, or other particles can prevent accurate measurement by obstructing the unit's optics.

2. Cautions:

Infrared thermometer should be protected for the following:


- 1) EMF (electromagnetic fields) from arc welders, induction heaters.
- 2) Thermal shock (caused by large or abrupt ambient temperature changes) allow 30 minutes for the unit to stabilize before use.
- 3) Do not leave the unit on or near objects of high temperature.

C. Distance to spot size

- 1) When taking measurement, pay attention to the Distance to Spot Size. As the Distance (D) from the target surface increases, the spot size (S) of the area measured by the unit becomes larger.

The Distance to Spot size of the unit is 12:1.

This unit is equipped with a laser, which is used for aiming.

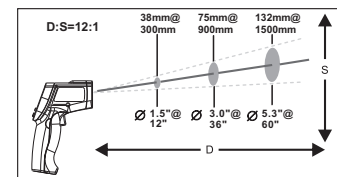

2. Field of view:

- Make sure the target is larger than the unit's spot size. The smaller the target, the closer the measurement distance. When accuracy is critical, make sure the target is at least twice as large as the spot size.

D. EMISSIVITY

Emissivity: Most organic materials and painted or oxidized surfaces have an emissivity of 0.95 (preset in the unit). Inaccurate readings will result from measuring shiny or polished metal surfaces. To compensate for this, adjust the unit's emissivity reading or cover the surface to be measured with masking tape or flat black paint. Measure the tape or painted surface when the tape or paint reaches the same temperature as the material underneath.

Material	Emissivity	Material	Emissivity
Aluminum	0.30	Iron	0.70
Asbestos	0.95	Lead	0.50
Asphalt	0.95	Limestone	0.98
Basalt	0.70	Oil	0.94
Brass	0.50	Paint	0.93
Brick	0.90	Paper	0.95
Carbon	0.85	Plastic	0.95
Ceramic	0.95	Rubber	0.95
Concrete	0.95	Sand	0.90
Copper	0.95	Skin	0.98
Dirt	0.94	Snow	0.90
Frozen food	0.90	Steel	0.80
Hot food	0.93	Textiles	0.94
Glass (plate)	0.85	Water	0.93
Ice	0.98	Wood	0.94

- 3 -

E. Operation

1. Operating the unit:

- 1) Open the battery door and insert a 9V battery properly.
- 2) Pull the trigger to turn on the unit.
- 3) Aim at the target surface and pull the trigger, then the temperature will be shown on the LCD.

This unit is equipped with a laser, which is only used for aiming.

2. Locating a Hot Spot:

To find a hot spot, aim the thermometer outside of interest, then scan across with an up and down motion until you locate the hot spot. (Figure 1)


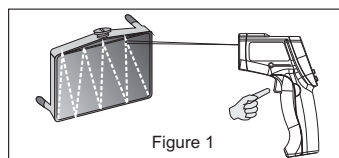


Figure 1


F. LCD display & buttons

1. LCD display:

- A: measuring reading
- B: measuring unit
- C: laser on icon
- D: back light on icon
- E: battery power icon
- F: scanning icon
- G: data hold icon
- H: mode/emissivity indicator
- I: data storage / read icon
- J: low temperature alarm icon
- K: high temperature alarm icon

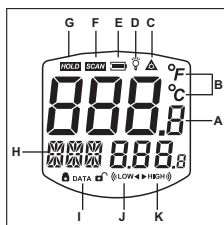

2. Diagram description: (figure 2)

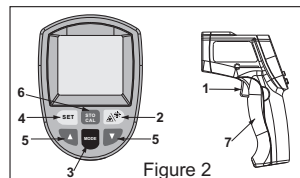

- 4 -

- (1) Trigger: When turned on, the LCD display shows the VERXX software version for 1 second. Then it turns to display the reading with the SCAN icon. Release the trigger, and the display shows the reading with the HOLD icon. Built-in auto power off in 30 seconds.

- (2) Laser / back light button: When the back light is turned on, any operations will remain with the back light for 10 seconds. The LCD indicates on/off status.

- (3)-(6) key functions: Press 3 keys, the LCD subdisplay blinks MAX-MIN-DIF-AVG-HAL-LAL-STO-EMS segment (only the main display means normal measuring mode). Press 4 keys to enter.

a. MAX: measuring maximum temperature

b. MIN: measuring minimum temperature

c. DIF: Basic on the reading before pressing 4 keys, compute the difference of the current reading.

d. AVG: measuring average temperature

e. HAL: high temperature alarm--when selected HAL, press 5 keys to set the high temperature alarm trigger and confirmed by pressing 4 keys. When reading over the trigger, the LCD displays the HI icon with BiBi audio sounds.

f. LAL: low temperature alarm--when selected LAL, press 5 keys to set the low temperature alarm trigger and confirmed by pressing 4 keys. When reading over the trigger, the LCD displays the LOW icon with BiBi audio sounds.

g. STO: data storage--when selected STO, lock & DATA & 1---indicator will be shown when pressing 4 keys. After the temperature is read out, press 6 keys to store, then 2---memory unit will be shown. There are 12 groups of memory units available. To recall the stored data in normal measuring mode, press 6 keys, remove all data by pressing 6 keys for 3 seconds.

h. EMS: Emissivity setup--press 5 keys for emissivity settings, press 4 keys to save setup and back to normal status.

- (7) Celsius / Fahrenheit switch: Please open the battery and push the slide switch for conversion.

- 5 -

G. Maintenance

1. Lens Cleaning:

Blow off loose particles using clean compressed air. Gently brush remaining debris away with a moist cotton swab. The swab may be moistened with water.

2. Case cleaning: Clean the case with a damp sponge/cloth and mild soap.

Note:

- 1) Do not use solvent to clean plastic lenses.
- 2) Do not submerge the unit in water.

H. Specification

Temperature range	-50~900°C (-58~1652°F)
Accuracy	0~900°C (32~1652°F): ±1.5°C (±2.7°F) or ±1.5% -50~0°C (-58~32°F): ±3°C (±5°F) Whichever is greater
Resolution	0.1°C or 0.1°F
Repeatability	1% of reading or 1°C
Response time	500 mSec, 95% response
Spectral response	8~14 μm
Emissivity	0.10~1.00 Adjustable (0.95 Preset)
Distance to Spot size	12:1
Operating Temperature	0~40°C (32~104°F)
Operating Humidity	10~95%RH non-condensing, up to 30°C (86°F)
Storage Temperature	-20~60°C (-4~140°F)
Power	9V Alkaline or NiCd battery
Typical battery life (Alkaline)	Non-laser mode: 22 hrs; Laser Models: 12 hrs
Weight	220g
Dimension	175*100*49mm

CE

MADE IN CHINA

- 6 -